

Kodiak Cold Therapy Unit Application: Shoulder



- 1) Place barrier between shoulder pad and skin.
- 2) Large flaps will lay over shoulder, small straps will lay over bicep.




- 3) Velcro strap labelled #1 to shoulder pad labelled #1.
- 4) Position strap underneath opposite arm and wrap around to back side, secure Velcro on #1 on back.



- 5) Velcro strap labelled #2 to bicep pad labelled #2.
- 6) Position strap around bicep and secure Velcro to bicep pad labelled #2 on back of bicep.



- 7) Place remaining Velcro strap labelled #3 on bicep pad labelled #3.
- 8) Position strap underneath arm to back and secure Velcro to bicep pad labeled #3.

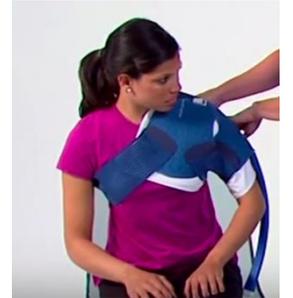

For an instructional video on cold therapy unit application please visit:
<https://www.breg.com/products/cold-therapy/pads/wrapon-pads/>

For questions or concerns,
please contact your local Pacific Medical Inc. representative:
775-525-0851